


'Simple to Use'

Easy Guide to your BA08 Remote Control

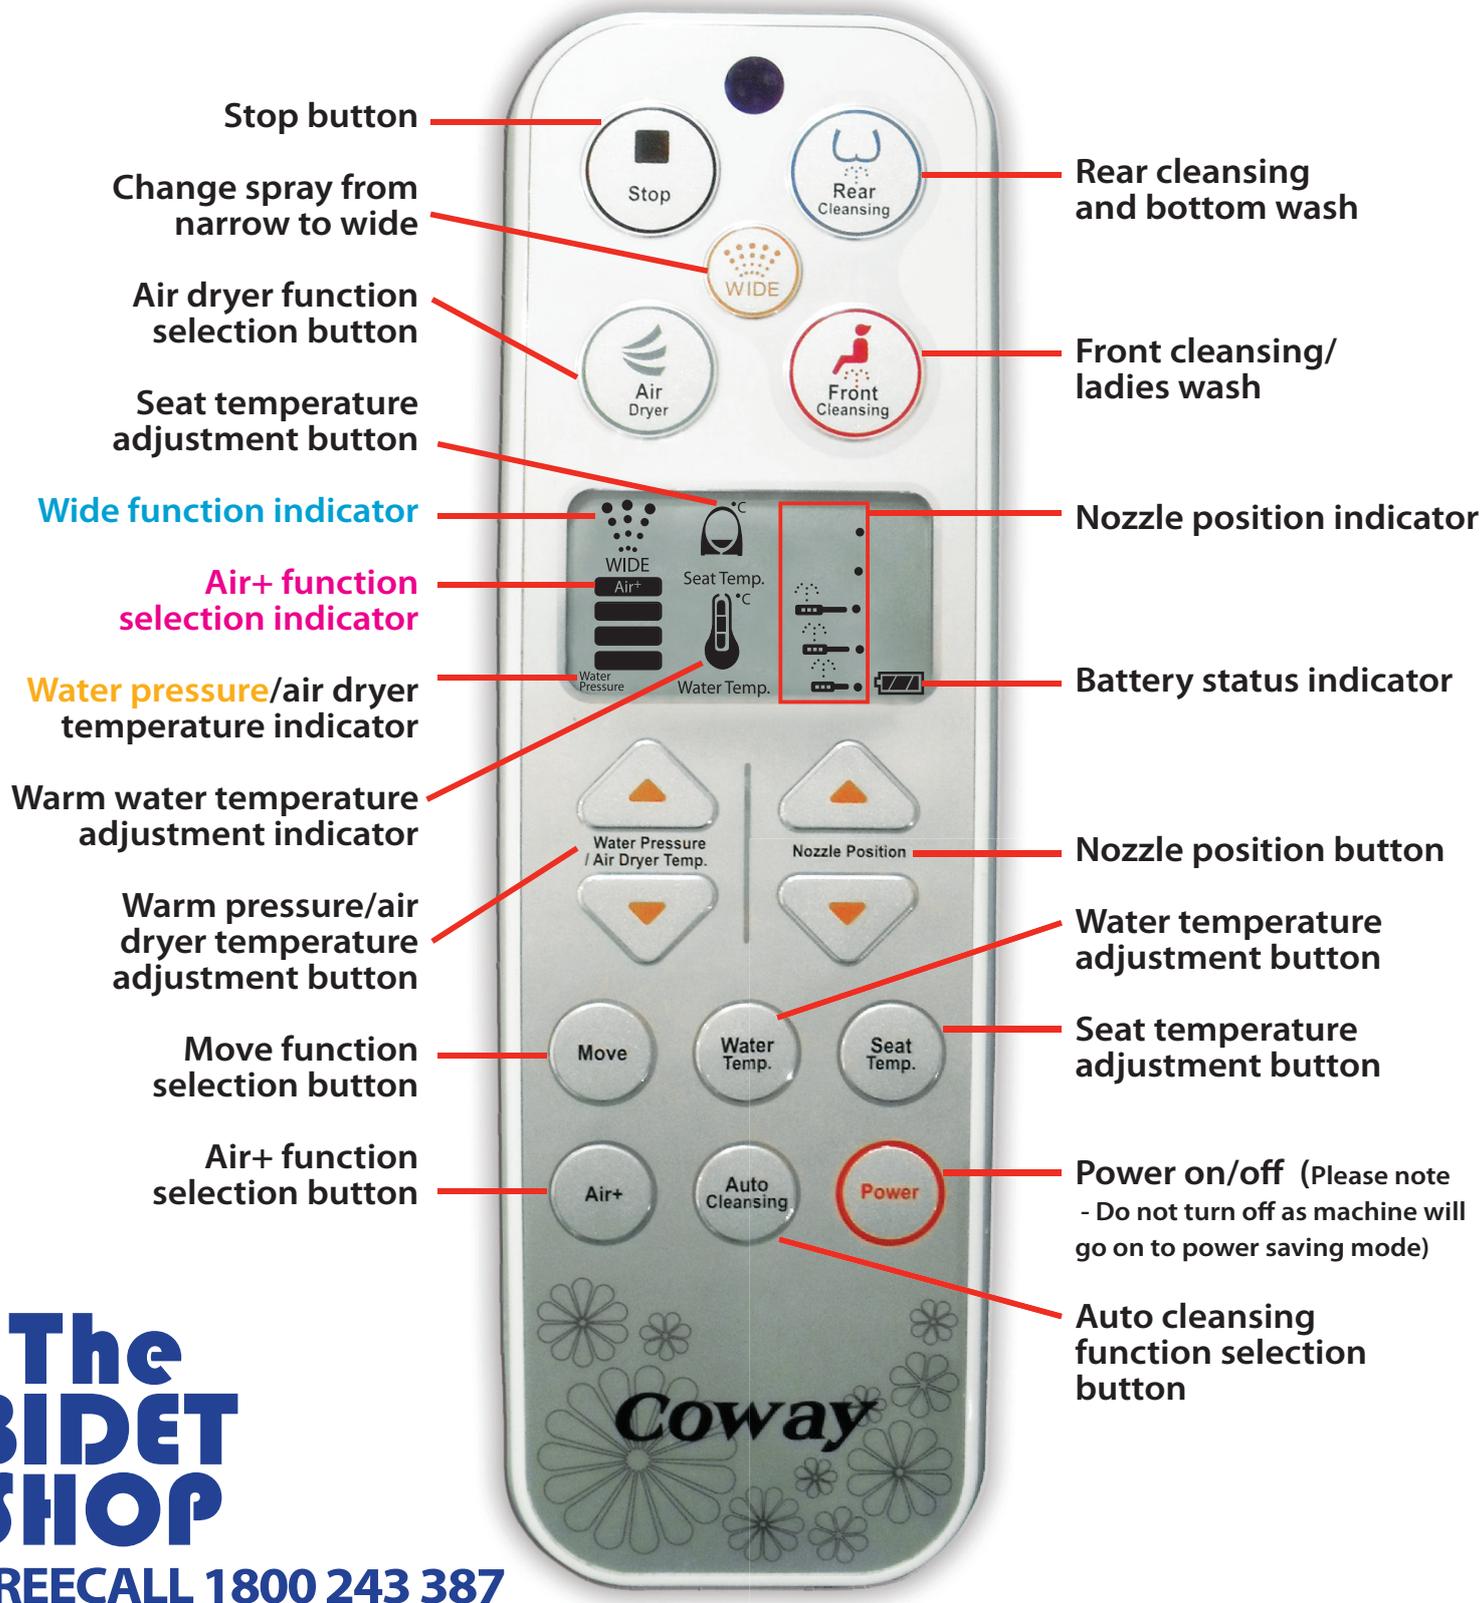


If you are not getting an adequate clean please check your LCD screen, it should show:

WIDE FUNCTION INDICATOR SET TO 1 OR 3 SPRAYS

AIR+ FUNCTION SELECTION INDICATOR

WATER PRESSURE 3 BARS

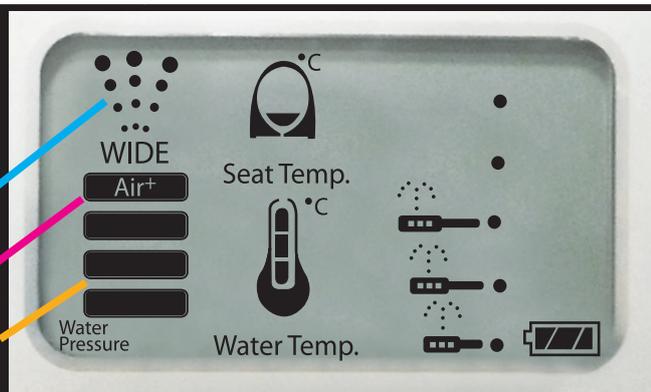

'BA08 Remote Control Functions'

Once your BIDET is set to your preferred temperatures, you only need to press 2 buttons.

First press the 'Rear Cleansing' or 'Front Cleansing' button, the machine will then provide your chosen wash for one minute.

Then press the 'Dry' button and the BIDET will provide a stream of air set at your preferred temperature. If it doesn't dry you immediately, just press the 'Dry' button again or you could soak up the large drops with a large piece of toilet paper.



Function Buttons Explained - What they can do for you

-  Stop ▶ Stop ceases all or any functions.
-  Rear Cleansing ▶ Activates nozzle for 45 seconds and cleansing runs for approximately 45 seconds.
-  WIDE ▶ Changes the width of the spray pattern from a single line point to a wider fan spray.
-  Air Dryer ▶ Press arrow up to increase air temperature. Press down to decrease air temperature. This function can only be activated when the Air Dryer is operating. Temperature shown on screen in the horizontal bars in the bottom left.
-  Front Cleansing ▶ Activate nozzle for front ladies wash. Front cleansing runs for approximately 45 seconds.
-  Water Pressure / Air Dryer Temp ▶ Press arrow up to increase water pressure. Press down arrow to decrease water pressure. Indication is shown by left horizontal bars on the bottom left screen.
-  Nozzle Position ▶ Press arrow up will move the nozzle further into the toilet bowl. Press the down arrow will move the nozzle back towards the toilet seat. 5 positions of these are shown on the right hand side of the screen.
-  Move ▶ Press the 'Move' function during rear or front cleansing to make the nozzle move forwards and backwards to wash across an area for a more thorough cleansing.
-  Water Temp. ▶ Adjusts the water temperature to 3 heating settings or off. Shown on the screen as a thermometer, empty thermometer indicates off. **1bar=Mild 2bars=Medium 3bars=Warmest**
-  Seat Temp. ▶ Adjusts the seat temperature to 3 heating settings or off. Shown on the screen as a toilet seat, empty seat indicates off. **1bar=Mild 2bars=Medium 3bars=Warmest**
-  Air+ ▶ An additional pressure setting, adding air to the water stream creating a gentler feel with increased cleansing power. This is indicated by a forth bar on the pressure setting Air+.
-  Auto Cleansing ▶ Activates the rear cleansing nozzle at all of settings shown on the screen for 45 seconds. The air dryer will automatically start and dry for approximately 2 minutes with a single touch.
-  Power ▶ This function is rarely used. Please do not touch as when the remote is not in use, it goes into sleep mode (power saving mode) and the screen goes blank. Remote can be 'woken' by pressing the function you require.